
















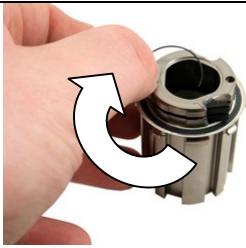


MAINTENANCE




GROUPSET	TYPE	OPERATION	REVISION	DESCRIPTION
ROAD GROUPSETS	ALL	010	1/2011	REPLACING THE PAWLS OF THE FREEWHEEL BODY

PRODUCTS ON WHICH THE PROCEDURE SHOULD BE APPLIED									
									
Ghibli™	Bora™	Hyperon™	Neutron™	Shamal™	Eurus™	Zonda™	Bullet Ultra™	Bullet™	
									
Scirocco™	Khamsin™	Vento™							

		
<p>1</p> <p>► To remove the freewheel body see OPERATION 004 (from 1 to 6).</p>	<p>2</p> <p>With a flat-bladed screwdriver remove the spring and the pawls.</p>	<p>3</p> <p>Before assembly, place the new pawls in synthetic oil. Remove the pawls and allow excess oil to drain.</p>

		
<p>4</p> <p>With Campagnolo's grease code LB-100 grease the housing of the pawl on the spring gap.</p>	<p>5</p> <p>Repeat for all the pawls.</p>	<p>6</p> <p>Insert the pawl into place.</p>

		
<p>7</p> <p>Insert one pawl at the time and position the spring into place.</p>	<p>8</p> <p>Check the spring has been inserted correctly inside the gaps of the pawl.</p>	<p>9</p> <p>Check the pawls move smoothly by pressing them manually.</p>

		
<p>10</p> <p>Grease the ratchet ring with Campagnolo's grease code LB-100.</p>	<p>11</p> <p>Spread some grease on the teeth's space over a 360° angle.</p>	<p>12</p> <p>► To mount the freewheel body see OPERATION 004 (from 11 to 16).</p>